



PIAB Quick Reference Guide

Warning: Remove all PSTN runs before terminating lines. Reverse voltage will damage unit.

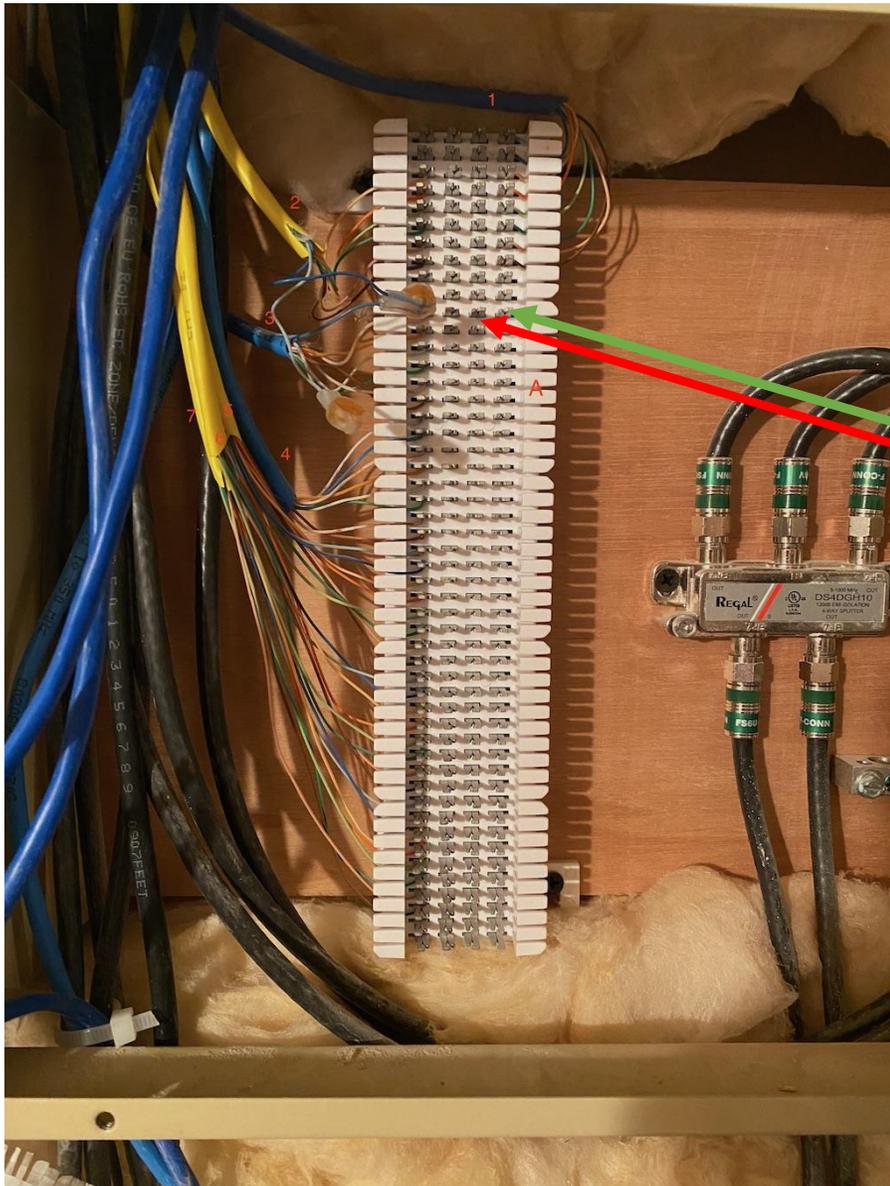

Example Supplied Cable

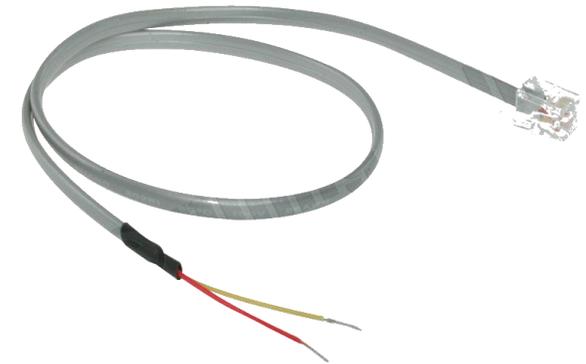

Supplied with the unit is a single pre-terminated cable for each active line.

- Step 1: Locate the 66 Block or D-Mark.
- Step 2: Determine each run associated with the cable pulls on the 66 block or D-Mark.
- Step 3: Disconnect current PSTN supply lines and align the marked ports with the designated inbuilding runs.
- Step 4: Strip the ends from the pre-terminated cable and pinout each line with a cable.
- Step 5: Insert the RJ11 coupler to the back of the DataRemote device with its associated jack for each run.
- Step 6: Complete all runs, power up unit, and test each line.

Note: Each Jack is an independent circuit and must be marked active on the sheet for the line to function.

Importance: Alarm Lines MUST BE properly paired with the designated/assigned Alarm Jack on the DataRemote appliance to function properly.